

may be recycled.

7. Accessories

Batteries, holders and different products for fastening or wearing VoiSec may be ordered. Contact your dealer or see www.voisec.se for up-to-date information.

8. Technical facts

Measures: diameter 39 mm, height with tray 18.5 mm.

Capacity: Audio recording 64s.

Runtime: typically 200 playouts of a 30 second message (volume dependant).

Power: two 1.5 V type LR44 buttoncell batteries.

VoiSec may be cleaned with a dampened cloth but not immersed in water.

This product has been CE-certified by an authorised laboratory.

9. Consumer contact

Please contact your point-of-purchase or

Libego AB

Diskettgatan 11B

SE-583 35 Linköping

Sweden

E-mail: info@libego.se

Web: www.voisec.se

Phone: +46(0)13 342 01 60

 
 
 
 
Fax: +46(0)13 342 01 61

VoiSec is patented, a registered trade mark and the design is protected.

VoiSec

VoiSec Lite User Manual

This information is also found at
www.voisec.se

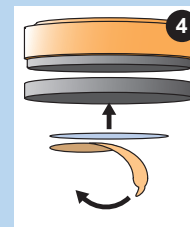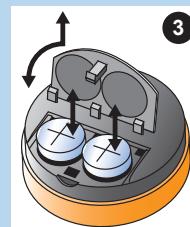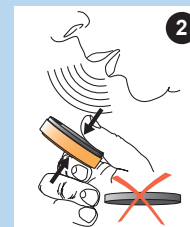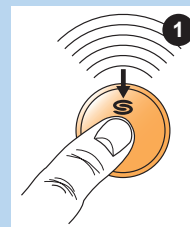

1. Playing a message

Press the lid to play a recorded message. The **VoiSec Multimes-**
sage will play all messages in a sequence from the start.

Press again to stop playing.

2. Recording a new message

- Remove VoiSec from the holder, turn it over and press the small recording button.
- Wait for two beeps before talking.
Talk straight towards the bottom surface of the button at a distance of approximately 10 - 20 cm.
- When the recording button is released, a two-beep signal and the recorded message should be played.
- The **VoiSec Singlemessage** will erase the previous message when recording a new one.
- The **VoiSec Multimessage** will add one message after another until the memory is full. After that, a new recording will erase all previous ones and start from the beginning again.

3. Changing batteries

Note! **Changing batteries will not erase** any recorded messages.

- Open the battery cover at the bottom of the button by removing the screw that keeps the battery cover locked with a small philips screwdriver.
- Insert two type AG13/LR44/SR44 batteries with the flat end (+) facing outwards and the protruding end inwards.
- Re-mount the cover and tighten the screw slightly.

4. Attaching VoiSec to other objects

- Use the included adhesive patches or other attachment

means from the accessories assortment.

- Attach the patch at the centre under the tray.
- Make sure the surface to be attached to is dry and clean.
- Remove any protecting material.
- Press the tray and the attachment means against the object to be attached to.

5. Error handling

VoiSec is depressed but nothing is heard. Possible causes:

- No message is recorded.
- The button is not fully depressed.
- The batteries are not properly inserted.
- The battery cover is not fully closed.
- The batteries are empty or of the wrong type.
- VoiSec has been shortcut by humidity. Remove the holder, the battery cover and the batteries. Let it dry and try again with fresh batteries.

The sound volume is too low.

- The message was recorded with too low a voice, the button facing the wrong way, beside or far away from the mouth.
- The hearing distance is too far.

The national warranties apply, contact your dealer if you suspect a manufacturing error.

6. Disposal

Used batteries should be disposed of in accordance to local regulations. VoiSec should be handled as electronic waste. The plastics